

IM213D-LM
0116
0002

Metered Oil Control Gun L-MOGF

Instruction Manual



To the Owner

PLEASE READ THIS INFORMATION CAREFULLY BEFORE USE.

Read and retain this instruction manual to assist you in the operation and maintenance of this product.

If you have any problems with the meter, refer to the maintenance and trouble shooting sections of this manual.

This manual contains connection and operating instructions for meters with Liquid Crystal displays (LCD).

If you need further assistance, please contact your local representative or distributor for advice.

This Flow Meter has incorporated the oval rotor principal into its design. This has proven to be a reliable and highly accurate method of measuring flow.

Exceptional repeatability and high accuracy over a wide range of fluid viscosities and flow rates are features of the oval rotor design. With a low pressure drop and high pressure rating oval rotor flow meters are suitable for both gravity and pump (in line) applications.

Important Information



WARNING

Before use, confirm the fluid to be used is compatible with the meter. Refer to Industry fluid compatibility charts or consult your local representative for advice.

Operating Principle

When fluid passes through the meter the rotors turn, as shown below. The magnets which are located in the rotors will pass across the PCB sensors.

A signal is generated which is then sent by the PCB to the relevant LCD, or receiving instrument as a Pulse Output.



Operational Overview

1. During normal operation the 6 Figure LCD display will appear as per the example diagram below.



2. Pressing the 'Mode' button will enable the operator to toggle between the following two Display options.

- Batch
- Total

3. The 'Batch' total can be reset by pressing the 'Reset' button.

Please note:

This function resets the 'Batch' only. The 'Total' displayed is unable to be reset.

4. A 'Sleep' mode has been incorporated in the meter to prolong battery life. The unit will activate sleep mode after 30 secs without use.

Programming Instructions



Note

Any changes made during the programming phase will automatically be 'Saved' when the unit is returned to the operation mode

Accessing 'Programming' Menu

To enter in the programming 'Menu', press the reset button for 5 secs.

Once in the programming menu the operator will be able to access (and adjust) 3 programming selections.

- 1- Setting Decimal Place
- 2- Display Units of measurement
- 3 - Calibration Mode

Setting the decimal place.

1. The unit will display the mode and the number of Decimal Places currently set.

E.g. 'dEC .22'

2. Pressing the black 'Mode' button will cycle through options available

- dEC .1 = 1 Decimal Place
- dEC .22 = 2 Decimal Places
- dEC .333 = 3 Decimal Places

3. To move to the next section (Unit) press the 'Reset' button

Setting the Units for both Batch & Total.

1. The LCD will now display 'UNIT'.
See 'Operational Overview'.

2. Pressing the 'Mode' button will cycle through the options of units that can be displayed for Batch.

- L
- GAL
- Qt
- Pt
- Oz
- dL

3. Next press the 'Reset' button to move onto setting the 'Total' units. The available unit options are as shown above.

4. Once the required 'Units' have been selected move to the next section (Calibration) by pressing the 'Reset' button.

Programming Instructions cont.

Calibration.

The calibration mode enables, in the case the operator suspects the accuracy of the meter is in question, the operator to dispense a known volume of fluid through the meter (Test Volume) This Test Volume is compared to the volume measured by the meter (Measured Volume). The meter will perform an 'Auto Calibration' if applicable.

1. The unit will display 'CALIBRATE' in the lower left hand corner, and a number on the main display.

The following options can be scrolled through by pressing the *Mode* button

- 2
- 4
- 8
- 20
- 100
- 250

This number represents the 'Test Volume' to be dispensed through the meter during Calibration.

2. On selecting the 'Test Volume' press the *Mode* button for 3 secs.

The meter will display 'PURGE' and 'CALIBRATE' will also start to flash.

3. Purge the system of air by running fluid through the system.

4. Once purged of air the calibration process can be started by pressing the *Mode* button.

The unit will display **RUN** and the 'Test Volume'.
E.g. **RUN 100**

5. Run the Test Volume through the meter until stipulated volume has been reached (e.g. 100).

6. Once this volume has been reached press the *Mode* button to stop the test.

The unit will now compare the 'Measured Volume' to the 'Test Volume' and perform an 'Auto Calibration' if the difference between the two volumes are within $\pm 8\%$ of each other.

Note:

If the difference between the two volumes is greater than $\pm 8\%$ of each other, the unit will display one of the following messages..

- ERROR LOW
- ERROR HIGH

if these messages are displayed please contact your Lubemate agent for advice.

Returning to 'Operation' Mode

At any stage the unit can be returned to the 'Operation' mode by pressing the 'Reset' button for approx. 3 secs.

Any program changes will automatically be saved.

Maintenance Procedures.

Disassembly

Ensure that the fluid supply to the meter is disconnected, and the line pressure is released before disassembly, with the exception for repair or maintenance to the LCD or PCB where it is not necessary to isolate the meter from flow. Refer to the exploded parts diagram on subsequent pages for item numbers.

1. Pull off protective boot (item 1) and unscrew the four retaining screws (item 2) next remove the Electronic Module (item 3)

2. Check for evidence of moisture into the electronic housing. If there is evidence of this, check the condition of the O-Ring (item 4)

3. To access the Rotor assembly, remove the 8 Meter Cap screws (item 9)

4. Remove the rotors (item 6) and inspect the condition of each.

Also investigate if there is the presence of any foreign material in the meter body, that may inhibit the rotors performance


Reassembly

1. Please note, the design of the rotor and shaft assembly ensures that the rotors can only be re-installed with the correct orientation. (i.e. with the magnets being in close proximity to the Electronic module).

When replacing the rotors the top face of the rotors should be flush with the sealing face of the meter body. If they sit higher than the sealing face remove, turn over and replace.

2. Replace the rotors (Item 6) onto the shafts at 90 degrees to each other (as per diagram below) and check their operation by turning either of the rotors.

If the rotors are not 'in mesh' correctly or do not move freely, remove one of the rotors and replace correctly at 90 degrees to the other rotor.

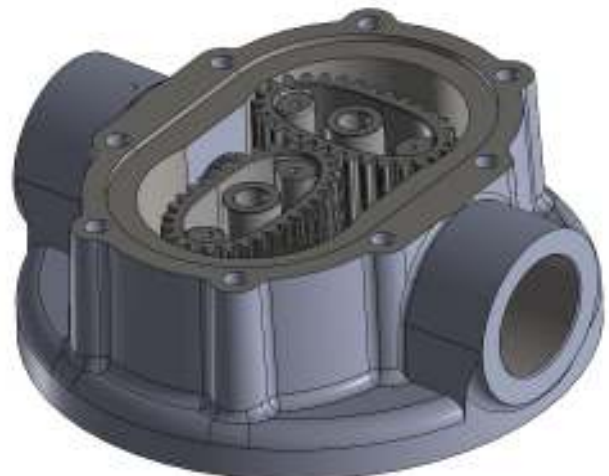


Maintenance Procedures

3. Check the Rotors (item 6) rotate freely.
4. Replace the O-Ring (item 7) into the groove of the Meter Cap (item 8).
5. Replace the Meter Cap onto Meter Body (item 5)
Tighten Meter Cap screws (item 9) in a diagonal sequence
E.g. 1, 5, 3, 7, 4, 8, 6, 2
6. Place the O-Ring (item 4) into the Electronic Module (item 3) and mount the Electronic module onto to the Meter Body
7. Replace and tighten the Retaining Screws (item 2) in diagonal sequence.
8. Align and push on the protective boot (item 1) onto the electronic module (item 3).
9. Before returning to service test the meter by turning the Rotors with your finger. Or applying a very low air pressure (no more than a good breath) to the meter

Changing the Battery.


A 'Low Battery' warning will be displayed on the LCD screen when there is 5% power left. The warning will remain active until the battery is replaced.

1. See 'Disassembly' procedure.
Follow step 1 to isolate the Electronic module.
2. See 'Photograph' below.
Remove the PCB from clear plastic housing by unscrewing the 3 retaining screws.
3. The battery can now be removed by placing a screw driver into the slot (*slot indicated by arrow*) on the PCB and easing the battery free from its compartment.
4. Replace with a new CR2450 Lithium battery.

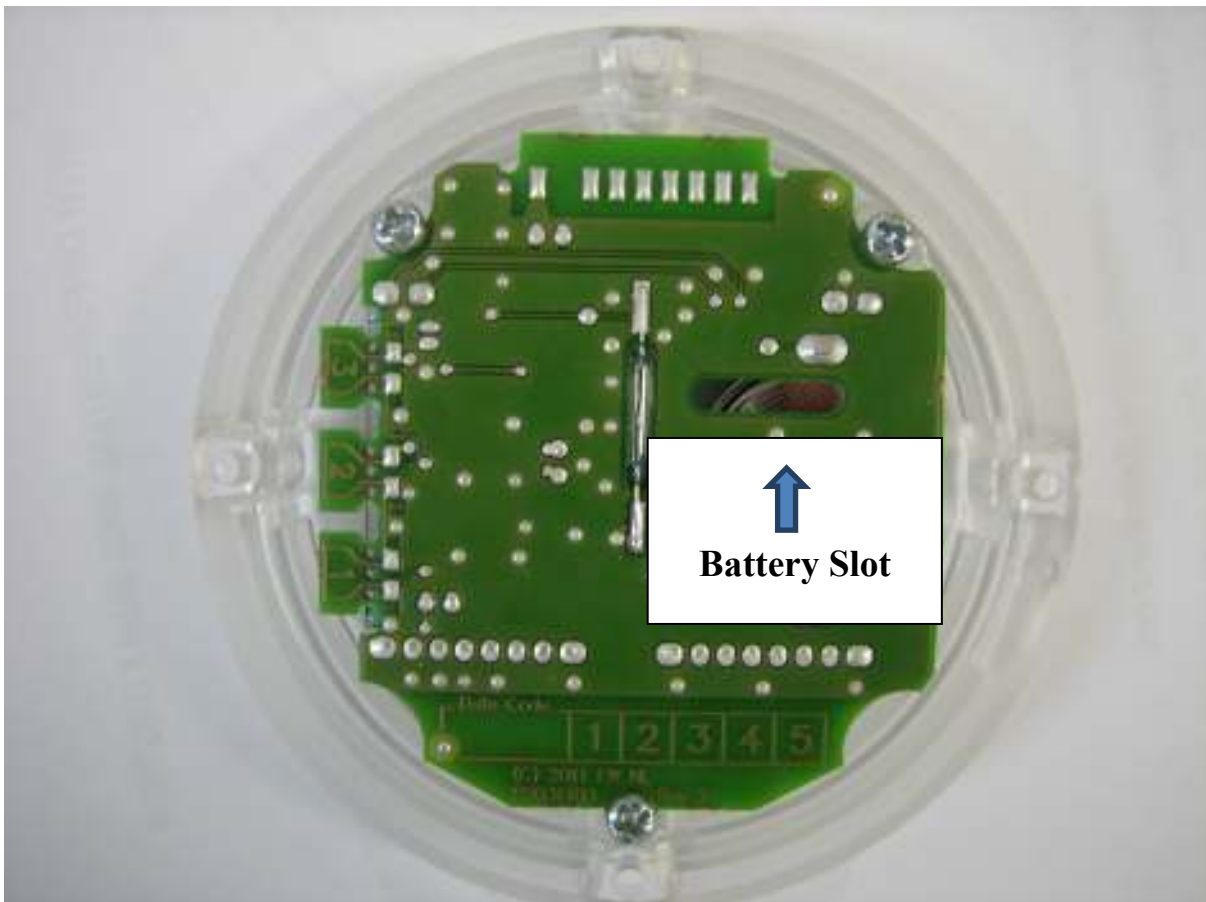

Reed Switch

Please Note: Not dependant on Polarity

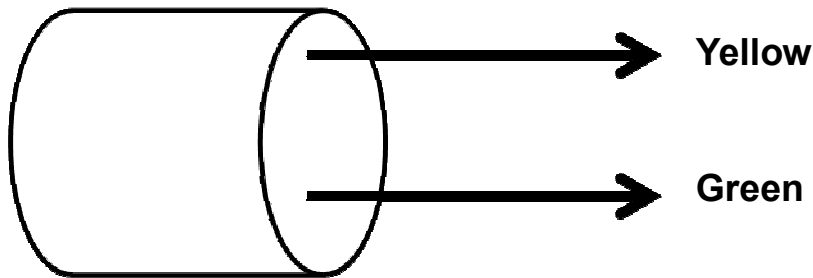

Product Specifications


*Accuracy	+/- 0.5% of reading
Type	Oval Gear
Flow rate	1 – 30 L/m 0.26 – 8 US Gal/m
Maximum Pressure	6900k kPa 1000 PSI 69 Bar
Re-settable 'Batch' Total	99999.9
Non- Re-settable 'Total'	999999
Maximum Viscosity	1000 cP (Centipoise)
Maximum Temperature	55 Deg C / 131 Deg F
Minimum Temp	-14 Deg C / 6.8 Deg F

* When tested with lubrication oil @ 25°C. Allowances should be made for changes to these parameters.

Troubleshooting Guide


Problem	Cause	Remedy
Fluid will not flow through meter	a) Foreign matter blocking rotors b) Damaged rotors c) Meter connections over tightened d) Fluid is too viscous	a) Dismantle meter, clean rotors b) Replacement rotor assembly required. c) Re-adjust connections d) See specifications for maximum viscosity
Reduced flow through meter	a) Partially blocked b) Fluid is too viscous	a) Check and clean meter. b) See specifications for maximum viscosity
Meter reading inaccurate	a) Fluid flow rate is too high or too low b) Air in fluid. c) Excess wear.	a) See specifications for minimum and maximum flow rates b) Bleed air from system c) Check meter body and rotors. (see instructions)
Meter not giving a pulse signal	a) Faulty hall effect sensor b) Faulty reed switch c) Magnets failed	a) Replace PCB Board b) Replace PCB Board c) Replacement rotor assembly required
LCD register not working	a) Battery flat b) Faulty LC Display	a) Replace battery b) Replace PCB module

Exploded Diagram—Meter

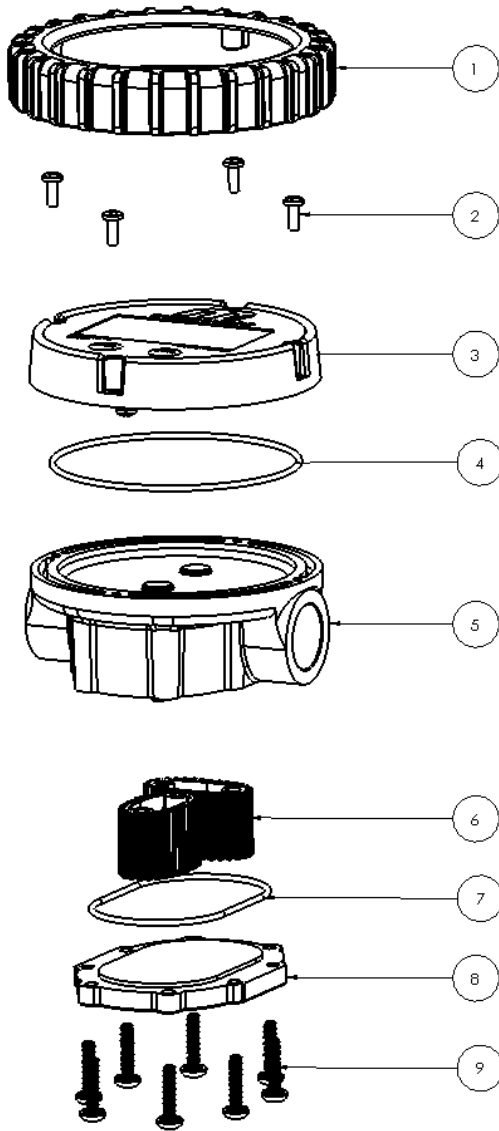

<i>Item No.</i>	<i>Part Description</i>	<i>Wetted Parts</i>
1	Protective boot	
2	Electronic module retaining screws	
3	Electronic Module	
4	O-Ring	
5	Meter Body	CA313 Aluminium
6	Rotor Set	Acetal (Delrin)
7	O-Ring	Nitrile Butadiene Rubber
8	Meter Cap	CA313 Aluminium
9	Meter cap screws	

Spare Part Kit—Meter

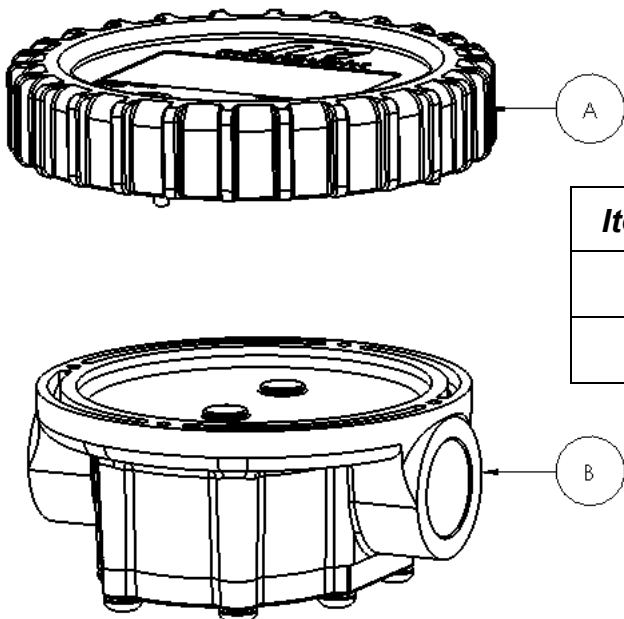

<i>Item No.</i>	<i>Part Description</i>	<i>Ordering codes</i>
A	Electronics Kit	DKIT-IM012-LM
B	Meter Kit	MKIT-IM012-01

Meter Dimensions



Spare Part List—Control Handle and Extension

<i>Item No.</i>	<i>Part Description</i>	<i>Ordering codes</i>
1	Handle	JL125s
2	Adaptor—Handle to Meter	IM214s
3	Flexible Extension	JL3s

Note: No illustration of Handle, Adaptor or Flexible Extension

Warranty Information

Lubemate Warranty

1. Macnaught Pty Ltd (“Macnaught”) warrants that all products supplied by Macnaught under the “Lubemate” brand will be free from any defects caused by faulty materials or workmanship (“Warranty”) for a period of 12 months from the date of purchase of the product.
2. The warranty is conditional on the purchaser, during the Warranty period:
 - a. delivering to Macnaught a detailed notice setting out full details of any defect in any product and details of the date and place of purchase (together with copies of purchase receipts and/or other supporting documents); and
 - b. at the purchaser’s own cost, returning the defective product to Macnaught.
3. Subject to compliance by the purchaser with clause 2, Macnaught shall replace any product found defective by its inspection by reason of faulty materials or workmanship.
4. This Warranty does not cover the failure of products, parts or components which, in the sole judgment of Macnaught, arises other than from faulty materials or workmanship, including misuse, abrasion, corrosion, negligence, accident, unauthorised modification, improper use, storage or handling, faulty installation or tampering by the purchaser or any third party.
5. If Macnaught’s inspection discloses no defect in material or workmanship, the product will be returned to the purchaser at customary charges, which will be advised to the purchaser.
6. Macnaught’s liability and the purchaser’s rights under this Warranty shall be limited to the replacement of defective products and in particular, shall not extend to any direct, special, indirect or consequential damage or losses of any nature.
7. The foregoing Warranty supersedes, voids and is in lieu of all or any other warranties. This Warranty does not form part of, nor does it constitute, a contract between Macnaught and the end-user or purchaser. It is additional to any warranty given by the seller of the products. This Warranty does not exclude, limit, restrict or modify the non-excludable rights or remedies conferred upon the end-user or purchaser, or the non-excludable duties or liabilities imposed on the seller or Macnaught, by Part V, Divisions 2, 2A and Part VA of the Trade Practices Act 1974 (Commonwealth) or other legislative provisions. Macnaught otherwise excludes, to the extent permitted by law, any rights conferred on the end-user or purchaser or duties or liabilities imposed upon Macnaught.

